


9. Connect a 3-inch long 5/8-inch hose to the inlet port using clamps for making tubing connection from a dishwasher. Clamp the other end to the tubing from the dishwasher. (See Fig.3)

10. Connect the air gap outlet to the garbage disposal drain inlet by using a length of 7/8-inch dishwasher drain line hose and two hose clamps.

IMPORTANT:

Remove the garbage disposal knock-out plug if still present. Tap away all edges until a round hole remains. Disconnect power to the garbage disposal unit and then remove all pieces of the plug inside the disposal. Run fingers carefully around the bottom of the disposal chamber to locate any fragments. (See CAUTION below)

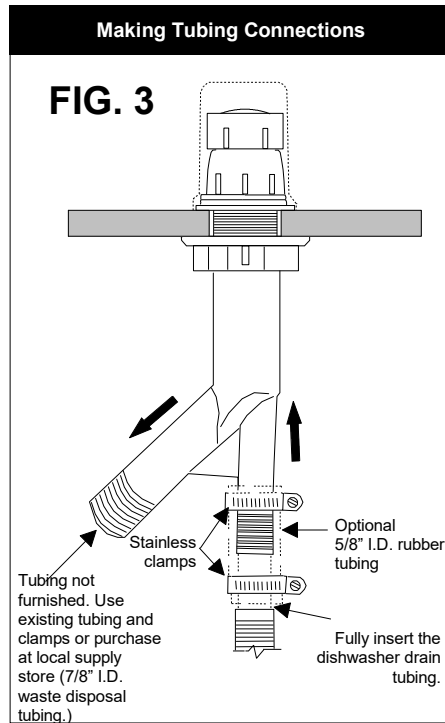

CAUTION: Exercise extreme caution whenever reaching hand inside the garbage disposal. After confirming that power has been turned off (and will stay off until the job is complete), use extra care not to cut fingers on sharp surfaces.

MAINTENANCE:

A dishwasher air gap may become clogged with leftover food debris escaping the dishwasher filter. The AG200-006 can be easily cleaned in the event of a clog.

To clear a blockage, pull off the decorative cover cap and unscrew the top housing. Remove any trapped food particles. After cleaning, carefully replace the top housing the same way it was removed. Install the cover cap.




Model:

AG200-006

**LONG THREAD
DISHWASHER AIR GAP**

(Maximum flow rate 9.8 GPM)

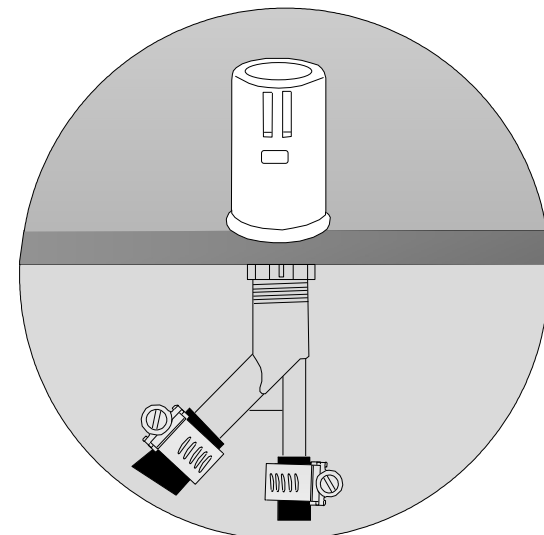

AG200-006

Installation Procedures

Caution - Do Not Overtighten Nuts or Clamps

LIST OF PARTS ENCLOSED

1 – Main Body


1 – Cover Cap

1 – Bottom Nut

1 – Mounting Washer

1 – Top Housing

1 – Mounting Nut

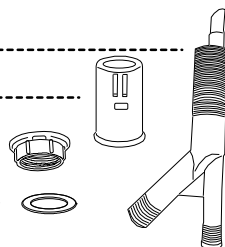


A dishwasher air gap is a critical component in maintaining a safe water supply. It prevents contaminants in the sink from flowing into the dishwasher and is required by code in most states.

The AG200-006 dishwasher air gap has extra-long threads for mounting through thick countertops and provides many advantages over other air gaps available on the market and ensures safety and peace of mind that your water supply is clean.

Please read the instructions once through before starting.

NEW INSTALLATION

1. Unit installation requires a 1-3/8 inch hole in the sink or countertop.

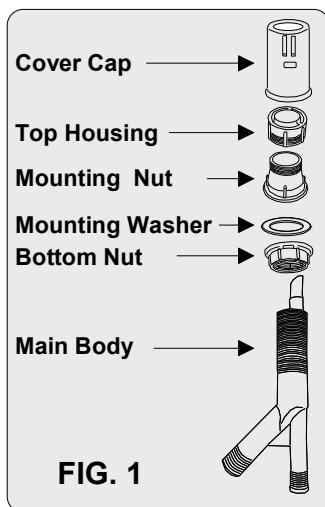


2. Unscrew the top housing from the AG200-006 body. Next, unscrew and remove the mounting nut and washer. Turn the bottom nut counterclockwise further down the air gap's body. Leave sufficient length for the air gap to protrude up through the mounting hole. (See Fig. 1)

3. Insert the air gap up through the hole in the sink and reinstall the mounting washer and nut over the threaded main body of the unit.

4. Install top nut over the housing and screw it down to touch the mounting nut.

5. Orient the bottom inlet and outlet under the sink as desired. Then, pull down on the air gap while tightening the bottom nut clockwise.

DO NOT OVERTIGHTEN.

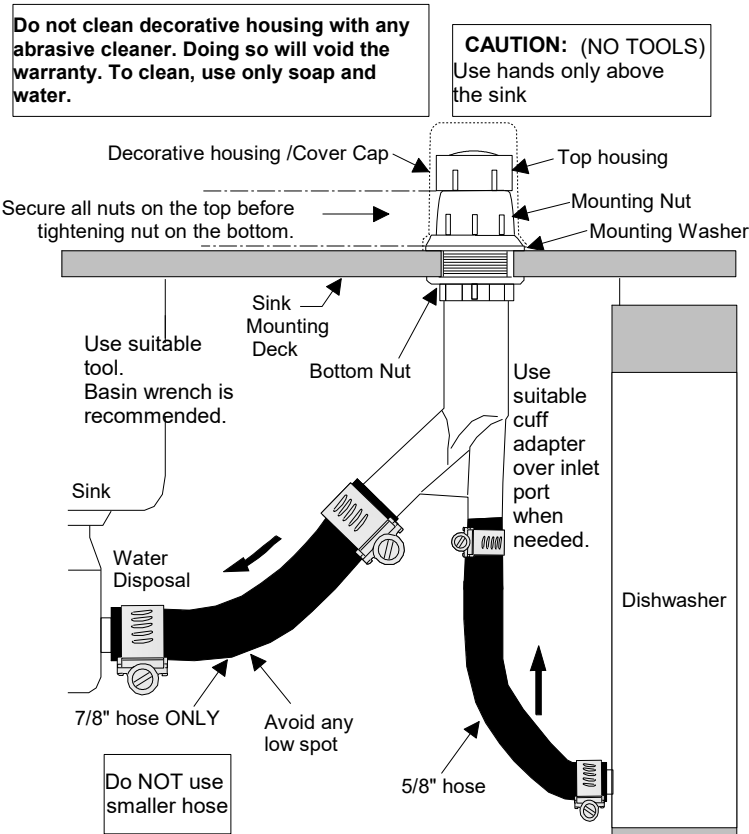

Do not clean decorative housing with any abrasive cleaner. Doing so will void the warranty. To clean, use only soap and water.

CAUTION: (NO TOOLS)
Use hands only above the sink

Secure all nuts on the top before tightening nut on the bottom.

Use suitable tool. Basin wrench is recommended.

Use suitable cuff adapter over inlet port when needed.

7/8" hose ONLY

Avoid any low spot

5/8" hose

Do NOT use smaller hose

6. Install the decorative cap by pushing it down over the housing to cover white plastic and washer. Rotate the decorative cap so that the two air gap openings face the sink.

7. Connect the dishwasher drain hoses to the 5/8-inch inlet ports of the AG200-006 with hose clamps.

8. Connect the air gap drain hose to the 7/8-inch outlet port of the AG200-006 with a hose clamp.