




Model:
AG200-009

**RO AIR GAP WITH QUICK CONNECT
1/4" INPUT AND 3/8" OUTPUT PORTS**

Maximum flow rate is 0.6 GPM (2.3 LPM)

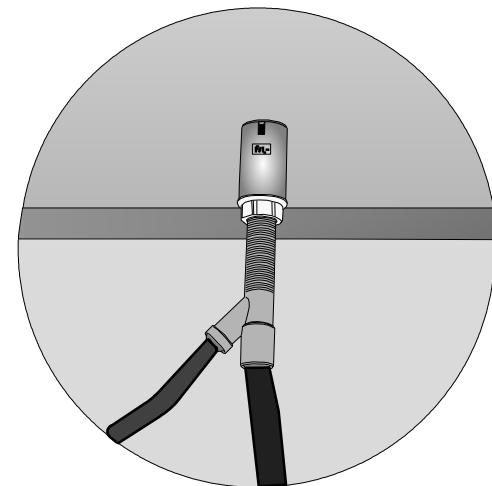

AG200-009

Installation Procedures

Caution - Do Not Overtighten Nuts

LIST OF PARTS ENCLOSED

<p>1 – Main Body</p> <p>1 – Decorative Cap</p> <p>1 – Bottom Nut</p> <p>1 – Mounting Washer</p>	<p>1 – Top Housing</p> <p>1 – Top Nut</p>
---	---

The AG200-009 reverse osmosis air gap prevents back-flow from the drain line into the RO system. The discharge water from the reverse osmosis filter flows into the inlet, passes the air gap, and then down to the drain outlet.

To install, push the 1/4-inch poly-tubing into the inlet port and 3/8-inch poly-tubing into the outlet port.

The AG200-009 is also compatible with tankless RO filters.

Please read the instructions before starting installation.

NEW INSTALLATION

1. Unit installation requires a 3/4-inch hole in the sink or countertop.

2. Remove decorative cap and unscrew the top housing from the AG200-009 body. Next, unscrew and remove the top nut and mounting washer. Turn the bottom nut further down the air gap's body. Leave sufficient length for the thread to protrude up through the mounting hole. (See Fig.1)

3. Insert the air gap from the bottom through the hole in the sink. Reinstall the mounting washer and top nut over the threaded main body of the unit.

4. Install top housing over the body and screw it down until it touches the mounting nut.

5. Orient the bottom inlets and outlet under the sink as desired. Pull down on the air gap while tightening the bottom nut clockwise. **DO NOT OVER-TIGHTEN.**

6. Install the decorative cap by pushing it down over the housing. Rotate the decorative cap so that the air gap opening face the sink.

7. Connect 1/4-inch tubing from RO unit into 1/4-inch push-in connector in inlet port 1 of the AG200-009. (See Fig.2)

8. Connect the AG200-009 outlet port to the garbage disposal drain inlet by using 3/8-inch ID waste disposal tubing .(See Fig.2)

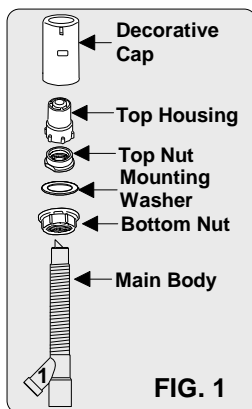


FIG. 1

To clean the decorative cap, use mild soap and water. Do not clean with abrasive cleaners.

CAUTION: (NO TOOLS)
Use hands only above the sink

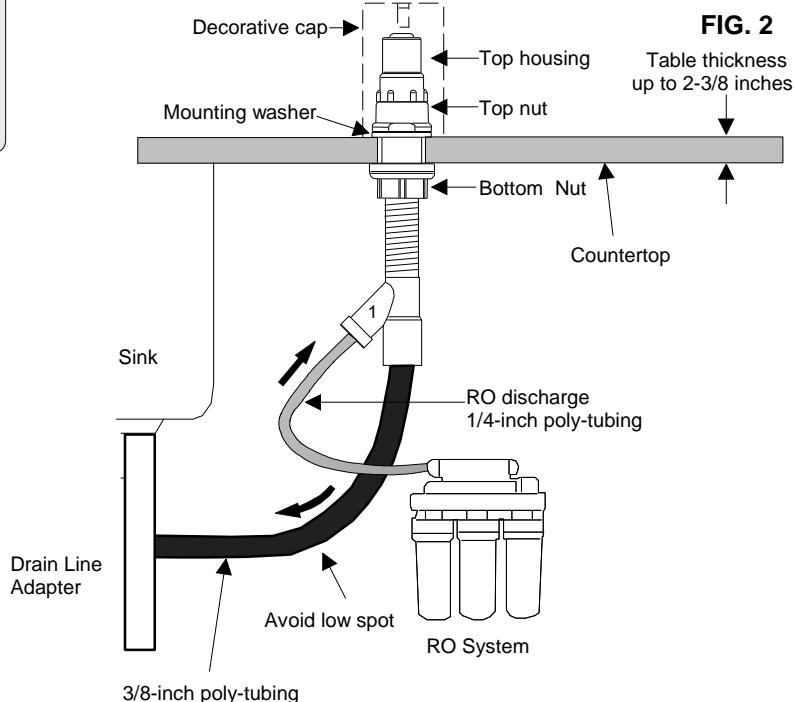


FIG. 2